

45000 SOFTWARE UPGRADE INSTRUCTIONS

REQUIRED ITEMS:

- **45000**
- **SD Card**
- **45000 Power Supply**
- **USB Cable or SD Card Reader**

PROCEDURE:

1. Download the data file called 5LNYxx.bin to your hard drive. This file is included in the zip file that you downloaded or were emailed. The xx number is a number greater than 16.
2. Copy the 5LNYxx.bin file to the 45000's SD card. Do this by either connecting your 45000 directly to your computer via a USB cable or by ejecting the SD Card from the 45000 and inserting it into a USB Card reader/writer drive and then connect that to your computer.
3. Once the SD Card appears on your computer, copy the 5LNYxx.bin file to the root directory of your SD Card. Do not place the .bin file in any folders on the SD Card.
4. After the file has been copied to the SD Card, eject or stop the card on your computer. If you were using the 45000 disconnect it from the computer. If you were using an external drive, move the SD Card from the USB drive to the 45000.
5. For the next few steps we recommend disconnecting the 45000's audio outputs since a loud pop can occur after the update runs. Please do not remove power at any point during the next few steps.
6. While the 45000 is powered up and running, press and hold down the OCTAVE button. After holding OCTAVE for approximately 3 seconds, the 4 track LEDs on the 45000 will blink rapidly a few times.
7. Once the LEDs begin blinking you can release the OCTAVE button.
8. After the LEDs finish blinking the 45000 will automatically restart and load the new software. During the restart, all the LEDs will blink once.
9. Your 45000 is now upgraded. If you like, you can connect the 45000 to your computer again and delete the .bin file from the CF Card otherwise it will remain on the card which is also fine.

Upgrading your 45000 software will not erase any loops that are on your SD Card.