

# electro-harmonix

## 22500 FOOT CONTROLLER

### Remote Foot Controller for 22500 Dual Stereo Looper

Thank you for purchasing the Electro-Harmonix **22500 FOOT CONTROLLER!** The 22500 Foot Controller is a wired remote control for the 22500 Dual Stereo Looper giving your feet the ability to increment or decrement through the Loop Banks.

The 22500 Looper records and plays in up to 100 Loop Banks per SDHC card. The Foot Controller makes it easy for your feet to navigate through the 22500's 100 Loop Banks, moving up or down by either 1 or 10 banks at a time.

#### - CONNECTIONS -

Connect the 22500 Foot Controller (22500 FC) to your 22500 main unit using a standard 1/4" mono instrument cable. Plug one end of the cable into the jack labeled FC on the 22500 Looper. The other end of the cable should be inserted into the 22500 FC's jack at the top of the unit. The Foot Controller is now ready for use.

#### - FOOTSWITCHES -

**LOOP UP/DOWN Footswitches** – Press and release the LOOP UP footswitch to increment the Loop Bank number by 1 on the 22500 main unit. Press and release the LOOP DOWN footswitch to decrement the Loop Bank number by 1.

Press and hold either footswitch for 1 second or longer to continuously jump up or down by ten banks at a time. Release the FSW when you get to the Loop Bank decade you need. It may be helpful to have Bank displayed on the 22500 main unit while changing banks with the 22500 FC.

The Loop Bank can be changed when the 22500 is either idle (stopped) or playing back loops. If Loop A, B, or a Rhythm loop are playing at the time you change Loop Banks, all of the loops stop play upon changing banks.

The 22500 FC footswitch presses are ignored if you press either footswitch while recording or overdubbing on the 22500.

## - WARRANTY INFORMATION -

Please register online at <http://www.ehx.com/product-registration> or complete and return the enclosed warranty card within 10 days of purchase. Electro-Harmonix will repair or replace, at its discretion, a product that fails to operate due to defects in materials or workmanship for a period of one year from date of purchase. This applies only to original purchasers who have bought their product from an authorized Electro-Harmonix retailer. Repaired or replaced units will then be warranted for the unexpired portion of the original warranty term.

If you should need to return your unit for service within the warranty period, please contact the appropriate office listed below. Customers outside the regions listed below, please contact EHX Customer Service for information on warranty repairs at [info@ehx.com](mailto:info@ehx.com) or +1-718-937-8300. USA and Canadian customers: please obtain a **Return Authorization Number (RA#)** from EHX Customer Service before returning your product. Include with your returned unit: a written description of the problem as well as your name, address, telephone number, e-mail address, and RA#; and a copy of your receipt clearly showing the purchase date.

### **United States & Canada**

EHX CUSTOMER SERVICE  
ELECTRO-HARMONIX  
c/o NEW SENSOR CORP.  
47-50 33<sup>RD</sup> STREET  
LONG ISLAND CITY, NY 11101  
Tel: 718-937-8300  
Email: [info@ehx.com](mailto:info@ehx.com)

### **Europe**

JOHN WILLIAMS  
ELECTRO-HARMONIX UK  
13 CWMDONKIN TERRACE  
SWANSEA SA2 0RQ  
UNITED KINGDOM  
Tel: +44 179 247 3258  
Email: [electroharmonixuk@virginmedia.com](mailto:electroharmonixuk@virginmedia.com)

This warranty gives a purchaser specific legal rights. A purchaser may have even greater rights depending upon the laws of the jurisdiction within which the product was purchased.

To hear demos on all EHX pedals visit us on the web at [www.ehx.com](http://www.ehx.com)  
Email us at [info@ehx.com](mailto:info@ehx.com)

## **FCC COMPLIANCE**

*Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*