



# MEMORY TOY

## Analog Delay with Modulation

+Congratulations on your purchase of the Electro-Harmonix **MEMORY TOY**...a compact analog delay that takes its heritage from our 1970's Memory Man and the legendary Deluxe Memory Man. Like the Memory Boy, the **MEMORY TOY** is based on the Deluxe Memory Man analog circuit. A modulation switch allows quick access to lush analog chorus.

### — POWER —

#### — OPERATING INSTRUCTION and CONTROLS —

Connect your guitar to the INPUT jack of the **MEMORY TOY** and the AMP jack to your amplifier. The **MEMORY TOY** can be used in combination with other effects devices. Experiment with any combination to develop your own unique sound. The footswitch toggles between effect and true bypass modes.

**DELAY** – Controls the delay time of your **MEMORY TOY**. The range of delay time is from 30ms to 550ms. Turn the delay time clockwise to increase the delay amount.

**BLEND** – The **BLEND** control allows you to vary the mix of direct and delayed signals from 100% dry when set counter-clockwise to 100% wet at full clockwise.

**FEEDBACK** – The **FEEDBACK** control increases the number of delay repeats or multiple echoes. At high settings the unit will begin to self-oscillate. Fairly high feedback with short delay settings produces a reverb type of effect.

**MOD Switch** – When set to the ON position, the MOD switch will enable a slow modulation on the delay time similar to the chorus modulation of the Deluxe Memory Man. Set the MOD switch to the OFF position to disable all modulation.

**INPUT JACK** – Connect the output of your instrument or another effects pedal to this jack. The input impedance presented at the INPUT jack is 1 MΩ.

**AMP JACK** – Connect the AMP jack to your amplifier input or the input of another effects pedal.

**STATUS LED and FOOTSWITCH** – When the STATUS LED is lit, the Memory Toy is in effect mode. When the LED is off, the Memory Toy is in true bypass mode. Use the FOOTSWITCH to toggle between the two modes.

## - WARRANTY INFORMATION -

Please register online at <http://www.ehx.com/product-registration> or complete and return the enclosed warranty card within 10 days of purchase. Electro-Harmonix will repair or replace, at its discretion, a product that fails to operate due to defects in materials or workmanship for a period of one year from date of purchase. This applies only to original purchasers who have bought their product from an authorized Electro-Harmonix retailer. Repaired or replaced units will then be warranted for the unexpired portion of the original warranty term.

If you should need to return your unit for service within the warranty period, please contact the appropriate office listed below. Customers outside the regions listed below, please contact EHX Customer Service for information on warranty repairs at [info@ehx.com](mailto:info@ehx.com) or +1-718-937-8300. USA and Canadian customers: please obtain a **Return Authorization Number (RA#)** from EHX Customer Service before returning your product. Include with your returned unit: a written description of the problem as well as your name, address, telephone number, e-mail address, and RA#; and a copy of your receipt clearly showing the purchase date.

### **United States & Canada**

EHX CUSTOMER SERVICE  
ELECTRO-HARMONIX  
c/o NEW SENSOR CORP.  
47-50 33RD STREET  
LONG ISLAND CITY, NY 11101  
Tel: 718-937-8300  
Email: [info@ehx.com](mailto:info@ehx.com)

### **Europe**

JOHN WILLIAMS  
ELECTRO-HARMONIX UK  
13 CWMDONKIN TERRACE  
SWANSEA SA2 0RQ  
UNITED KINGDOM  
Tel: +44 179 247 3258  
Email: [electroharmonixuk@virginmedia.com](mailto:electroharmonixuk@virginmedia.com)

This warranty gives a purchaser specific legal rights. A purchaser may have even greater rights depending upon the laws of the jurisdiction within which the product was purchased.

To hear demos on all EHX pedals visit us on the web at [www.ehx.com](http://www.ehx.com)  
Email us at [info@ehx.com](mailto:info@ehx.com)

## FCC COMPLIANCE

*Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

*Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.*