

2880 Software Upgrade Instructions:

1. Download the data file called 4RNY40.bin to your hard drive. This file is included in the zip file that you were emailed or downloaded.
2. You will need to copy the 4RNY40.bin file to the 2880's Compact Flash card. Do this by either connecting your 2880 directly to your computer via a USB cable or by pulling the CF Card out of the 2880 and putting it into CF Card reader/writer drive and then connecting that to your computer.
3. Once the CF Card appears on your computer, copy the 4RNY40.bin file to the root directory of your CF Card. Do not place the .bin file in any folders in the CF Card.
4. Eject or stop the CF Card on your computer. If you were using the 2880 disconnect it from the computer. If you were using an external drive, move the CF Card from the drive to the 2880.
5. While the 2880 is powered up and running, press and hold down the following buttons on the 2880, in this order: **STEREO MODE**, **RECORD** and **PLAY**.
6. Immediately the 4 track LEDs on the 2880 will blink rapidly. Once the LEDs begin blinking you can let go of the buttons. After the LEDs finish blinking the 2880 will automatically restart and load the new software. Please do not remove power to your 2880 at any point during this procedure.
7. Your 2880 is now upgraded. If you like, you can hook the 2880 to your computer again and delete the .bin file from the CF Card otherwise it will remain on the card.

We have included the original 2880 software in the zip file if you would like to restore it. The file is called 4RNY30.bin. Upgrade the 2880 using the 4RNY30.bin file instead of 4RNY40.bin file. The upgrade procedure is exactly the same for both files. You must delete the 4RNY40.bin from the card prior to restoring the 4RNY30.bin file.